

AIR VELOCITY TRANSMITTER

MODEL AVS-200

DESCRIPTION

The **Model AVS-200** is an electronic air velocity transmitter for use in HVAC systems, laboratories, and industrial applications. It features three DIP switch-selectable velocity ranges and two analog outputs. The **Model AVS-200** also has a selectable time constant (the time it takes to register 63.2% of a velocity change) of three or ten seconds. The sensing probe has an adjustable insertion length of up to 8" (20.3 cm) and a 4.5' (1.37m) cable. The **Model AVS-200** is powered by 24 VAC.

FEATURES

- **Three DIP switch-selectable velocity ranges**
- **Two analog outputs**
- **Selectable time constant**
- **24 VAC power**
- **Dust- and splash-proof (IP44) enclosure**




SPECIFICATIONS

Power supply	24 VAC ±10%, 50/60 Hz
Power consumption	5 VA
Velocity ranges (selectable with DIP switches)	0-1000 fpm (0-5.08 m/s) 0-2000 fpm (0-10.16 m/s) 0-3000 fpm (0-15.24 m/s)
Outputs	0-10 VDC (min 1000Ω) 0-20 mA (max 600Ω) 4-20 mA (max 600Ω)
Deviation by temp	Max 0.1%/°C
Time constant (selectable)	τ = 63.2% for 3 or 10 sec

Repeatability Accuracy	0.5% of measuring range ±5% of measured value + 0.5% of measuring range
Ambient temp	-4° to 140°F (-20° to 60°C)
Sensor Electronics	32° to 122°F (0° to 50°C)
Enclosure	Dust and splash proof (IP44)
Material of enclosure	Polycarbonate plastic
Cable length	4.5' (1.37m)
Sensing probe length	1" to 8" (25 to 20.3 cm) adjustable
Weight	1.8 lb (0.8 kg)

WIRING

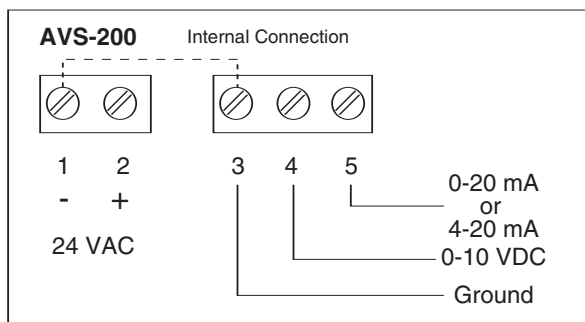

Note: Any device sharing a transformer with the **AVS-200** must have a common power "-" and signal "-" terminal, and polarity must be observed. Otherwise, a separate transformer must be used with the **AVS-200**.

INSTALLATION

The sensing probe must be installed through a 5/8" (16 mm) hole in the duct with the arrow on the mounting flange pointing in the direction of the air flow. The tab on the mounting flange should be aligned with the line on the probe to ensure proper airflow measurement. The insertion length is adjustable. Loosen the set screw, and move the probe to the selected position. The scale on the probe shows the insertion length.

Always install the sensing probe downstream of filters and coils. Avoid placement directly in the outside air stream.

For best accuracy, locate the sensing probe a minimum of three duct diameters (or widths) upstream of any obstruction and a minimum of five duct diameters downstream.

ORDERING INFORMATION

MODEL	DESCRIPTION
AVS-200	Air Velocity Transmitter